


Tektus 45 Recessed/Telescopic - Tektus 60 Recessed/Telescopic

DOXIS
LIGHTING FACTORY

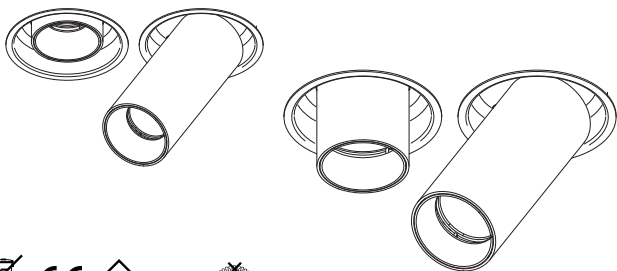

- Instructions:**
1. Cut out hole in ceiling
 2. Connect LED & 230V to driver
 3. Insert driver and spot into ceiling
 4. Hold back recessed ring and pull out cylinder (Only for telescopic version)
Spot can only be tilted when completely retracted (Only for telescopic version)



Forward voltages and nominal drive currents are mentioned on the label supplied with the product or can be found in the technical datasheet of the product.

Always use the correct driver.
Always install the driver according to the wiring schematics supplied with the driver.
Always check if multi-current drivers are set to the correct output current.

Doxis Lighting Factory cannot be held responsible for damage caused by using the wrong driver.

Cut out hole in ceiling

Tektus 45: Ø70mm
Tektus 60: Ø92mm

1

Red wire: +
Black wire: -

Connect LED & POWER (230V)
For specific driver setting and electrical connection please refer to the specific driver wiring manual
*Supplied driver may vary from driver illustrated

2

Place driver in ceiling

Place in ceiling

Open springs

3

ONLY FOR TELESCOPIC VERSION:

HOLD BACK

PULL

Tilt only when fully retracted

4

⚠ Attention!!

Always follow the instructions described in this document and store this document for future reference.

Do not touch LED surface. Warranty void if LED contact has taken place.
Only to be installed by a qualified electrician.

Always make sure power is completely switched off when working on luminaire.

Doxis Lighting Factory NV cannot be held responsible for any damage caused by incorrect installation, modification, reparation or incorrect application/usage of the product.

Do not topload with insulation materials

Build in depth:

- Tektus 45 Recessed: 85mm (standard)
65mm (only with 490.27.20 driver)
- Tektus 45 Telescopic: 113mm
- Tektus 60 Recessed: 75mm
- Tektus 45 Telescopic: 150mm