
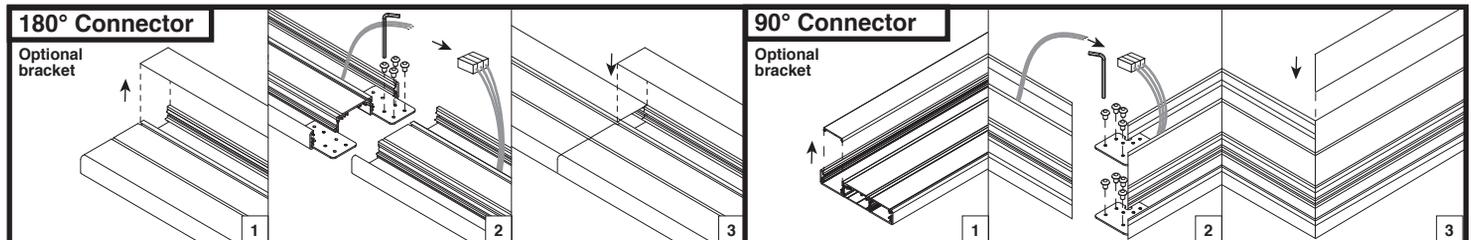
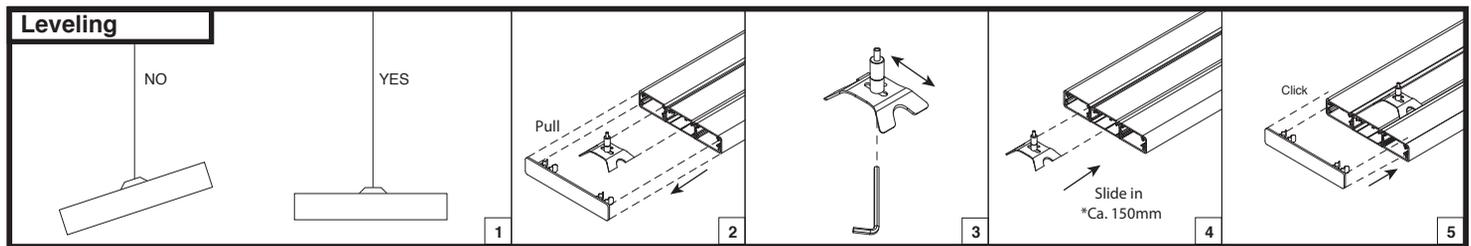
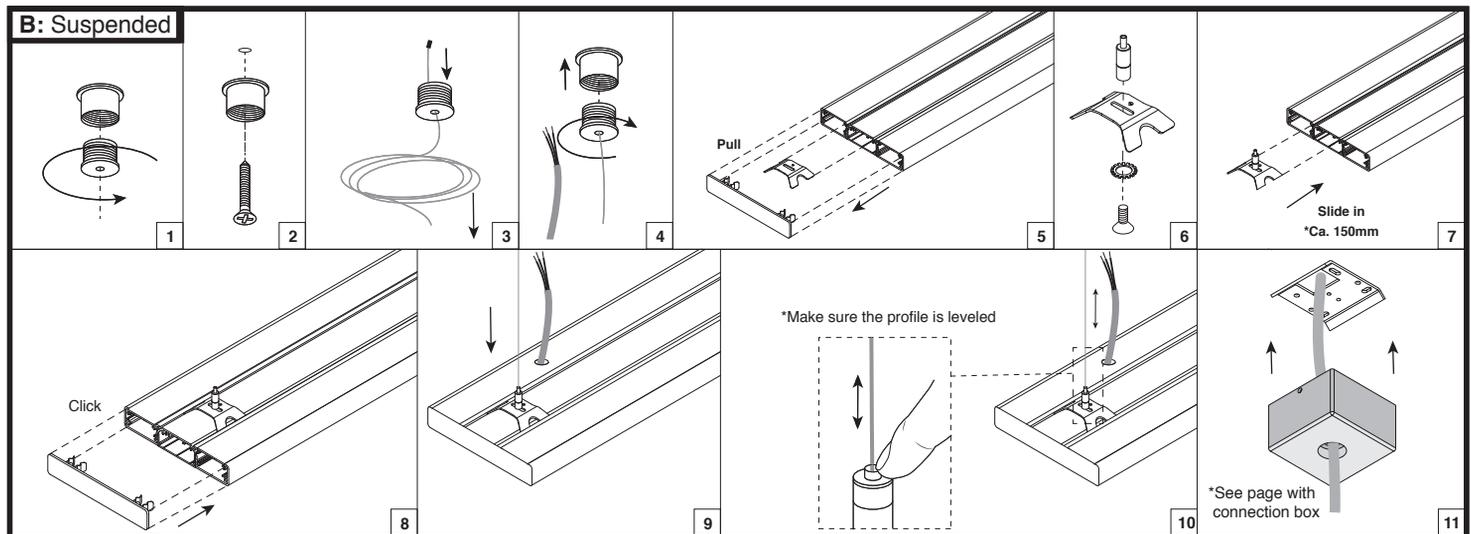


LEDLiner 170

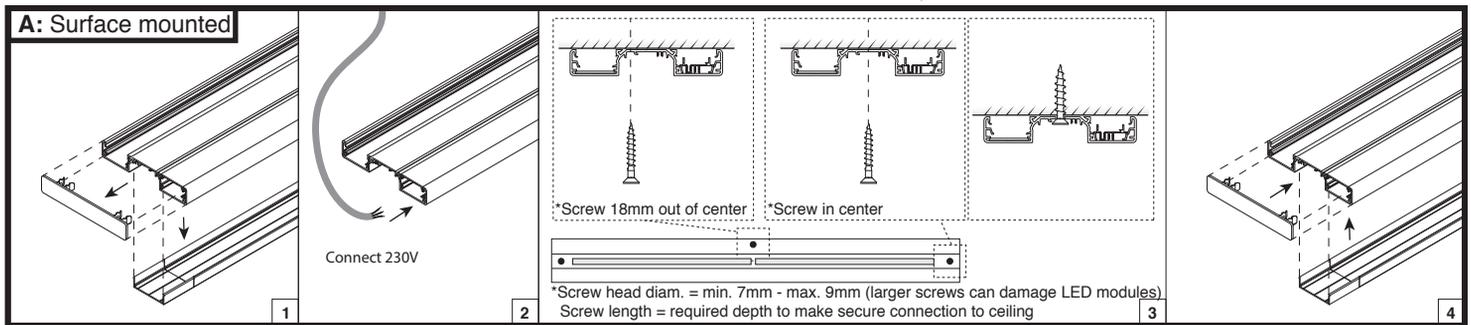

- A) Surface Mounted**
1. Remove PC cover + end cap
 2. Connect 230V
 3. Fix profile to ceiling using screws
Only use pre-drilled holes
Respect screw dimensions
 4. Place PC cover + end cap

- 180°+90° Connector**
1. Remove top cover
 2. Place pieces against each other
Fix connector bracket using screws
Connect power
 3. Place top cover

- B) Suspended**
1. Disassemble ceiling fixation
 2. Fix ceiling fixation to ceiling using screws
 3. Pull steel wire trough bottom part of ceiling fixation
 4. Reassemble ceiling fixation
 5. Remove end cap / suspension bracket
 6. Fix wiregripper onto suspension bracket
 7. Slide suspension brackets into profile
 8. Place end cap back
 9. Put wire into wiregripper
 10. Adjust height and cut of excess wire
 11. Place housing over bracket and reassemble
See page with mounting brackets

- Leveling**
1. Level profile
 2. Remove end cap / suspension bracket
 3. Move wiregripper on suspension bracket
 4. Slide suspension brackets into profile
 5. Place end cap back

⚠ Attention!!

Be very careful with LEDs when working on product! Do not touch LEDs
Do not let tools come in contact with LEDs
Warranty void if LED contact has taken place
Only to be installed by a qualified electrician
Always make sure power is completely switched off when working on profile
Always make sure suspension cables are placed perpendicular to both the ceiling and the profile itself
When connecting multiple parts of a structure always make sure LED polarity is respected. This means connecting white to white and grey to grey wires